

**CERTIFICATION OF WORK**  
(To be completed by the Contractor and saved in the Contractor's CMMS)

FACID/Building: DE 07

Date of Visit: 1-22-21

Contractor Personnel on Site:

1. Brian Davis
2. Steve Darkle
3. \_\_\_\_\_
4. \_\_\_\_\_
5. \_\_\_\_\_
6. \_\_\_\_\_

**Service Calls – Service Call Number and Description**

1. Factory Rep from bmt Flame programmer
2. 13439
3. \_\_\_\_\_

**CERTIFICATION OF WORK**

To be signed by the Contractor:

Print Name: Brian Davis Date: 1-22-21

Signed: Brian Davis

To be signed by Facility Manager:

By signing the Certification of Work, the said government representative signature does not constitute acceptance of any work performed by the contractor, it only acknowledges that the contractor was on-site during the identified timeline:

Print Name/Rank: Darrell Davis Date: 1-22-21

Signed: Darrell Davis

E-Mail: \_\_\_\_\_

CONFIGURATION JUMPERS	INTACT	CLIP AND REMOVE
JR1 MODULATION	DISABLED	ENABLED
JR2 FLAME AMP	DISABLED	ENABLED
JR3 FLAME FAILURE	RETRY(0)	LOCKOUT

HONEYWELL

RM7865 C 1007

OPER. AMB. TEMP:

-40°F TO 140°F

-40°C TO 60°C

97-4860R REV. A



## WARNING

FIRE OR EXPLOSION HAZARD  
CAN CAUSE PROPERTY DAMAGE  
SEVERE INJURY, OR DEATH.

Ensure proper selection of  
configuration jumpers before  
starting the burner operation.



## ATTENTION

LES RISQUES DE FEU OU  
D'EXPLOSION PEUVENT CAUSER  
DES DOMMAGES, DES BLESSURES  
GRAVES, OU ENTRAINER LA MORT.

S'assurer que la configuration des cavaliers  
est adéquate avant d'actionner le brûleur.

POWER  
BLOWER  
FLAME  
MAIN  
ALARM  
RESET