

CERTIFICATION OF WORK PREVENTIVE MAINTENANCE

(To be completed by the Contractor and saved in the Contractor's CMMS)

FACID/Building: _____ Date of Visit: 4/4/19

Contractor Personnel on Site:

- | | |
|----------|----------|
| 1. _____ | 3. _____ |
| 2. _____ | 4. _____ |

Work Performed:

Preventive Maintenance - Services Completed (Annual, Quarterly, Monthly, equipment identification, etc.)

1. _____
 2. _____
 3. _____
 4. _____
 5. _____
-

CERTIFICATION OF WORK

To be signed by the Contractor:

Print Name: _____ Date: _____

Signed: 

To be signed by Facility Manager:

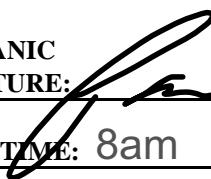
By signing the Certification of Work, the said government representative signature does not constitute acceptance of any work performed by the contractor, it only acknowledges that the contractor was on-site during the identified timeline:

Print Name/Rank: _____ Date: _____

Signed: _____

E-Mail: _____

PREVENTATIVE MAINTENANCE PROGRAM CHECKLIST
CCTV CAMERA/SECURITY MONITOR

SITE AND BLDG #: **NY067-B2**LOCATION/RM #: **WO# 3243** ASSET # **10627**MECHANIC
SIGNATURE: DATE: **4/4/19**START TIME: **8am**FINISH TIME: **8:30am**

CHECK POINT	CHECKPOINT DESCRIPTION	TASK COMPLETE		NOTES/ ACTIONS (IF TASK COMPLETE IS CHECKED NO, PROVIDE EXPLANATION)
		YES	NO	
SPECIAL INSTRUCTIONS				
1	In addition to the procedure(s) outlined in this standard, the equipment manufacturer's recommended maintenance procedure(s) and/or instruction(s) shall be strictly adhered to.	✓	/	
3	Follow lock out/tag out procedures at all times. De-energize or discharge all hydraulic, electrical, mechanical, or thermal energy prior to beginning work.	✓	/	
TO BE PERFORMED AT EACH INSPECTION SERVICE				
1	For the system's camera and housing, verify the following: - Camera/lens focus is adjusted properly. - Camera field of view is adjusted to customer's requirements. - Camera lens is dust free. - Interior of camera enclosure is clean and dry. - Check operation of pan tilt and zoom focus. Use controller in control room to check all these operations.	✓	/	cameras are stationary
2	For the system's wiring and cables, verify the following: - Check wiring and cable harnesses for wear and fray. - Check to make sure cable is dressed properly. - Check connectors and cable entry points for loose wiring. - Check that the coaxial cable is transmitting an adequate video signal to control room. Signal should be free of distortion, tearing, hum-bars, EMI, and rolling. - Make sure all coaxial connectors are insulated from conduit and pull boxes.	✓	/	all wiring and harnesses look good

CHECK POINT	CHECKPOINT DESCRIPTION	TASK COMPLETE		NOTES/ ACTIONS (IF TASK COMPLETE IS CHECKED NO, PROVIDE EXPLANATION)
		YES	NO	
3	<p>For the system's control equipment, verify the following:</p> <ul style="list-style-type: none"> - Monitors are free from picture burn-in and distortion. - Monitors have proper contrast and brightness. - Check that all control equipment is operational. This means that switchers allow proper sequencing, multiplexers are properly encoding and decoding, and matrix switcher keyboards are fully operational. - Clean all monitor screens, control panels, and keyboards with a diluted cleaning solution. - Check all coaxial connectors on the back panels for loose connections. - Check all power connections to ensure AC plugs are not loose. 	<input checked="" type="checkbox"/>		no loose connections and all is clean

Note: The technician shall perform any repairs identified during PM up to \$250 (direct labor and direct material cost) per PM occurrence. For any deficiencies found exceeding \$250 open a corrective maintenance (CM) ticket and include the Asset #, WO #, photos, and a detailed description of the deficiency.

To be performed by: General Maintenance Worker

Additional Notes: